

Index

A. [INTRODUCTION](#)

[Parts Identification](#)

B. ADJUSTMENTS

1. [Venting Valves \(Pre-1972 Only\)](#)
2. [Accelerator pumps](#)
3. [Float Level](#)
4. [Second Stage Diaphragm](#)
5. [Idle Fuel Shut-off Solenoids](#)
6. [Idle Speed and Mixture](#)
7. [Linkage](#)
8. [Choke Cover Tension](#)
9. [Choke Tie Rod](#)
10. [Choke Fast Idle Speed](#)
11. [Choke Gaps](#)
12. [Vacuum Throttle Control or Dashpot](#)
13. [Fuel Return Valve \(Pre-1972 only\)](#)
14. [Idle Lifting Switch \(If applicable\)](#)

C. [TROUBLESHOOTING GUIDE](#)

D. [DATA AND ADJUSTING VALUES](#)

[About this Manual](#)

[Back to JaimeKop.com](#)



Hits since 12/26/99

Last Update: 1/22/00

All of the pages have been added as of 1/22/00.

Please report any errors via [email](#), even the little ones! Thank You.